# TIS AIR SOCKET Wi-Fi Smart Power Plug

Model: AIR-SOCKET-S







Equipped with a built-in Wi-Fi module so that it can connect automatically to the Internet, this device enables you to remotely control your lights and any other electrical appliances that are connected to the power outlet.

PRODUCT SPECIFICATIONS				
•	Power supply	Input Voltage Output Power Protection Current consumption	110-230 VAC 50/60 Hz 3W / 12V Built-in protection fuse 20 mA / 12 V DC	
<u>.</u>	Output	Number of channels Nominal voltage Nominal current per channel	1 110 – 230 V AC 50/60 Hz 10 A / 230 VAC	
<u>.</u>	Output switching current	Max switching current  Max Continues current  Max. switching Voltage	16A/230 VAC Resistive 8A/230 VAC Florescent 10A/230 VAC 440VAC / 125VDC	
<u> </u>	Output service life	Mechanical Endurance	> 10,000,000 OPS	
<u>_</u>	Output switching times	Operating time Releasing time Max. operating frequency	15 mS (at nomi. Volt) 8 mS (at nomi. Volt) 20 cycle/min	
τιςλΐr	TIS AIR	WIFI Signal Protocol Standard	2.4 GHz 802.11 b/g/n	
0	Socket Type	Optional	Europe, UK, US or Universal type	
†‡†	Operating and display elements	touch buttons Backlight TIS AIR Upgrading	Control Button     LED Backlight Indicators     TIS Protocol Messages & Commands     By WIFI Connection	
۵	Weight	Without packaging	20 g	
+	Dimensions	Length × Width × Height	62mm × 68mm × 102mm	
	Housing	Materials Internal Parts color IP rating	PC fire-proof White IP 50	













Model: AIR-Socket-S



### **Read Instructions**

We recommend that you read this Instruction Manual before installation.



### **Mounting Location**

Can be installed in any power outlet.



### Safety instructions

Electrical equipment should only be installed and fitted by electrically skilled persons.

Failure to observe the instructions may cause damage to the device and other hazards.

These instructions are an integral part of the product and must remain with the end customer.



#### **Electrical Wires**

The installer should adequately consider the total current consumption when connecting any device.



### **Programming**

This device can be tested and programmed manually. Advanced programming requires TIS Device Search software. Advanced software programming knowledge should be obtained in the advanced training courses.



### Warranty

We provide a warranty as required by law. A hologram warranty seal and product serial number are provided on each device.

Please send the description of the defect with Product S/N to our dealer network.



### **Simple Installation**

Just plug it in to the power outlet.








#### TIS AIR SOCKET

Model: AIR-Socket-S

# INSTALLATION

 $\Sigma$ 

Insert TIS AIR Plug in to the wall power outlet.

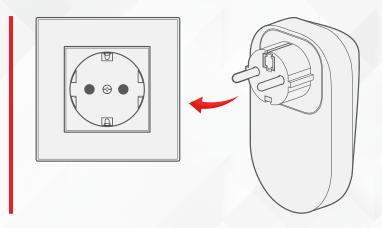

# SERVER LINKING

In order for a project to be fully linked to the TIS server, server configuration must be enabled in just 1 product within that project.

If you have already done that with any other panel, just ignore these steps and proceed to configuration steps.

To do the server linking, complete the following steps:

1>>

In the TIS App, go to Settings ➤ Connect Server, and follow the steps by entering your SSID password.








#### TIS AIR SOCKET

Model: AIR-Socket-S

# **SERVER LINKING**

On the AIR Plug, press and hold the PRG button for 6 seconds. The button LED will start blinking.

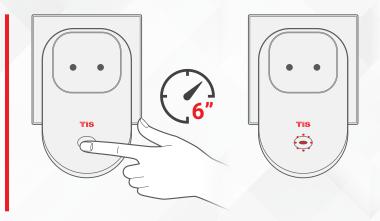

On the TIS app, press Search and wait for a few seconds. The plug will link to your Wi-Fi, and the button LED will turn blue.



Select your server option and 4-digit password. Then, press Save.







#### TIS AIR SOCKET

Model: AIR-Socket-S

# CONFIGURATION STEPS


1>>

In the TIS App, go to the settings and select TIS Air config. Then, enter your SSID password.





Press and hold the PRG button on the Air Plug for 5 seconds. Release the button when the red LED flickers.

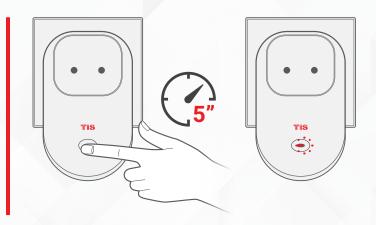

On the TIS app, press search and wait for a few seconds. The AIR Socket will link to your WiFi, and the LED will turn

blue.





F



Model: AIR-Socket-S

# CONFIGURATION STEPS



In the TIS App, add comments for your plug.



Select the room, and then select channel **5** names and icons.







RICHARDSON TX 75081.USA



Model: AIR-Socket-S

# CONFIGURATION STEPS

Select the blackout setting that you need.



Go to the room page, and control your plug from your app.







RICHARDSON TX 75081.USA




Model: AIR-Socket-S


# PAIRING (MANUAL PROGRAMMING)

To pair the TIS Air Power Plug with any TIS wall panel buttons, do the following:


Long press the plug's ON/OFF PRG 1>> button for 15 seconds until you hear its relay sound starting ON/OFF sequence.

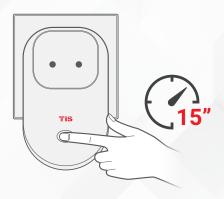

Go to your wall panel, and short press on **2** any lighting button.

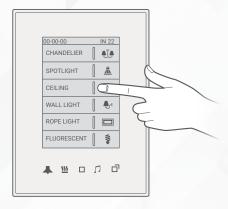

**3**>> Test by pressing the wall panel's ON/OFF button. The AIR Plug relay should respond by turning ON and OFF accordingly.

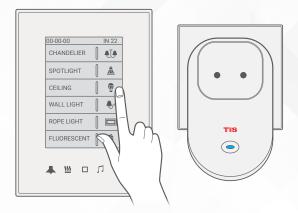




Model: AIR-Socket-S

# **USER OPERATION**

You can turn your plug power ON/OFF any time by pressing the ON/OFF button.

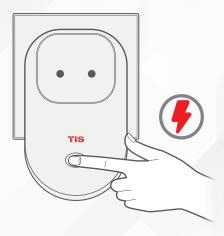







Model: AIR-Socket-S

# **TROUBLESHOOTING**

<b>②</b>	PRG button blinks purple color rapidly	<b>Reason:</b> The plug address conflicts with another device in the TIS network. You need to press and hold the PRG button for 6 seconds so that the module can get a new address.
<b>?</b>	Device's PRG LED is RED	<b>Reason 1:</b> The device is not connected to Wi-Fi.
	Device cannot link to Wi-Fi router	Reason 1: The device is too far from the Wi-Fi router.  Reason 2: The SSID or password is not correct.  Reason 3: Some setting in the Wi-Fi router is preventing new devices from being added.
	Wall panels can't pair with the device	Reason 1: TIS-BUS connection is not linked to the same Wi-Fi network.  Reason 2: The manual programming function is disabled in the device (default is enabled).



wrong.

Reason 1: The TIS-BUS connection is not

Reason 2: The programming address is

linked to the same Wi-Fi network.

Wall panels can't control the

device channels